



## Coffee Maker Instructions

### Operating Instructions

- Fill coffee pot with **COLD** water to desired amount. Water level marks are stamped into the side of the pot.
- Wet the filter basket and add coffee grounds (see chart below). Make sure stem is set into the center well in the pot.
- Put cover on and place pot on stable, level surface.
- Plug coffee pot into standard 110 electrical outlet with **NO EXTENSION CORDS** or other heating/cooking devices.
- If applicable turn on the coffee pot. (Faberware pots have no switch – Regal Ware pots do)
- After coffee has finished brewing (the “serve” light will go on), carefully remove hot basket. The pot’s warmer will keep the coffee hot.

**Brewing Time:** Approximately 1 minute per cup of coffee. (Half hour for 30 cups, one hour for 60 cups, etc.)

### Coffee Chart

<u># of Cups</u>	<u>Coffee Measure</u>
30	2 cups
42	3 cups
60	3.5 cups
100	6 cups

\*1 pound of coffee is equal to 4.75 cups of ground coffee (approx).

\*NEVER IMMERSSE COFFEE POT IN WATER! Simply rinse out coffee pot and basket before returning.